


► TENAX Adapter for BiVOC2(V2)

The TENAX adapter protects the TENAX adsorbent with 1/4 inch Swagelock screw connection from contamination while connecting and disconnecting it.

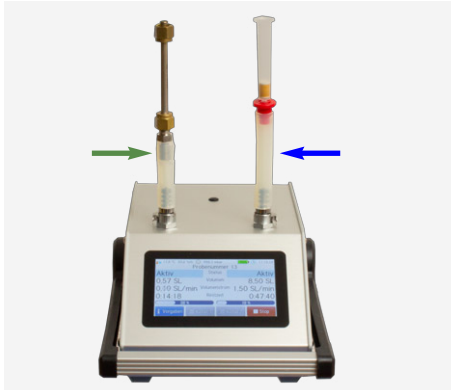

The photo shows the TENAX adapter (green arrow) in operation on the left channel of BiVOC2V2.

The total wall thickness of 5 mm of the short hose connection keeps the adsorbent in a steady position of during sampling.

The adapter for Supelco DNPH cartridges (blue arrow) is connected to the right channel.

Both adapters are sized such that the air inlets are at the same height.



The cap with an additional plug protects the thread during transport.



The TENAX adapter fits perfectly into one of the holes of the foam insert of the handling case for transportation.

The additional plug in the cap prevents foreign objects from entering the adapter.



The delivery includes two small sealing rings.

Those sealing rings are not needed for using the TENAX adapter.

Technical Data:

Connection to Pump	Metal hose nipples, Type MC2203
Connection to TENAX Adsorbents	1/4 inch Swagelock Screw Connection (Stainless Steel)
Length	83 mm
Weight	40 g
Article Number	02-395



holbach
UMWELTANALYTIK

Umweltanalytik Holbach GmbH
Sperberweg 3 D-66687 Wadern

www.holbach.biz
info@holbach.biz